


Hello,

Thanks for buying the RADE/GARAGE 701 690 skid plate with toolbox and brake cylinder cover. The installation is quite easy and you will need less than one hour.

0/ What you get in the package:



See how it looks like, when your skid plate and brake cylinder cover is installed.

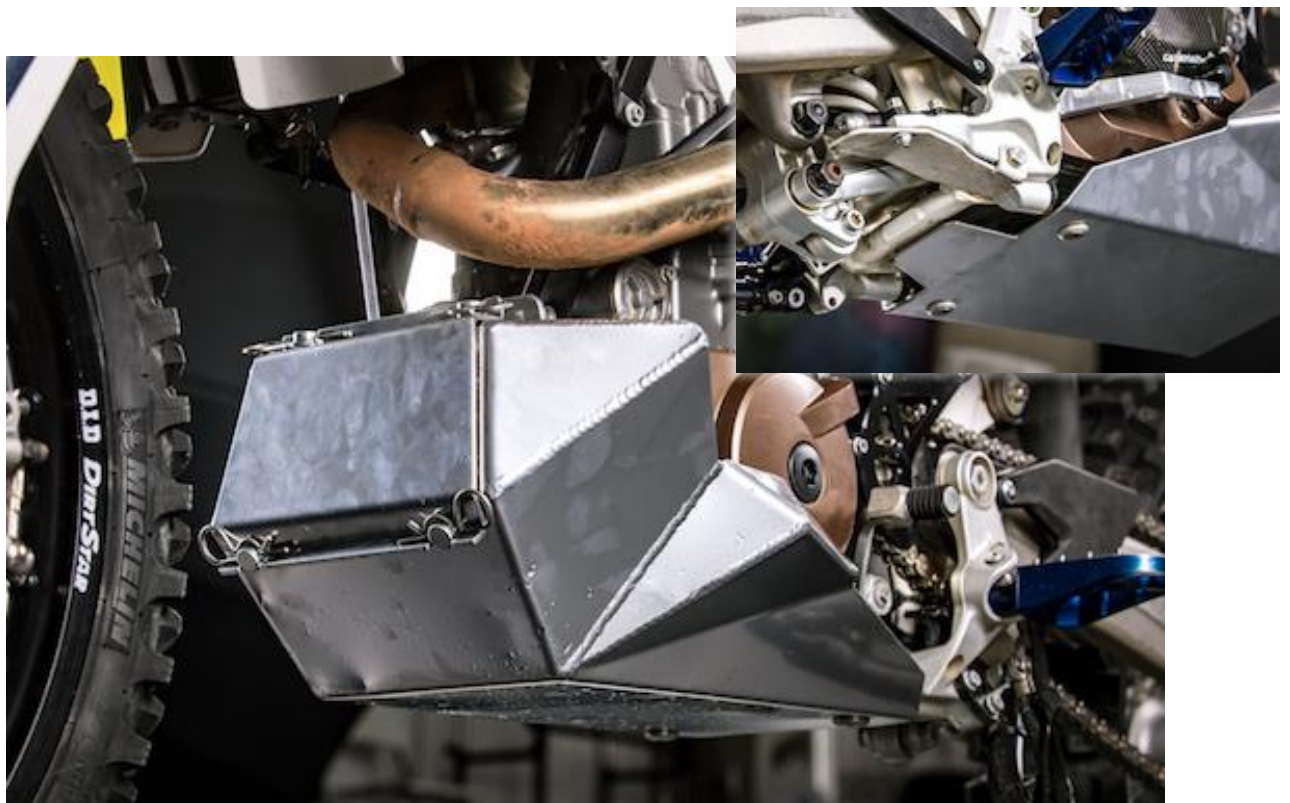

1/ Remove the OEM skid plate and remove the OEM rear holders and rubber silencers – you will use them for the R/G skid plate



2/ Mount the front holder with M6 bolts and nuts



3/ Mount the rear OEM holder with OEM bolts and use 2+2 rubber spacers



Dont forget to put back the OEM rubber ruounded silencers! The black stuff on the picture in the corner...

4/ Mount the skid plate to the bike. Insert it into the OEM rubber silencers in the back and mount with the M6 bolts in front

5/ Mount the brake cylinder cover... In the back use the M6 + nut and M8 from the side.



That's all... Enjoy your upgraded Adventure bike! ☺ If you have any questions, feel free to send me an email at rade@radegarage.com

Thanks!
R/G Team